


# 930-6-D ANSI Series Assembly Drawing


930-6-D ANSI-S (131204) EN

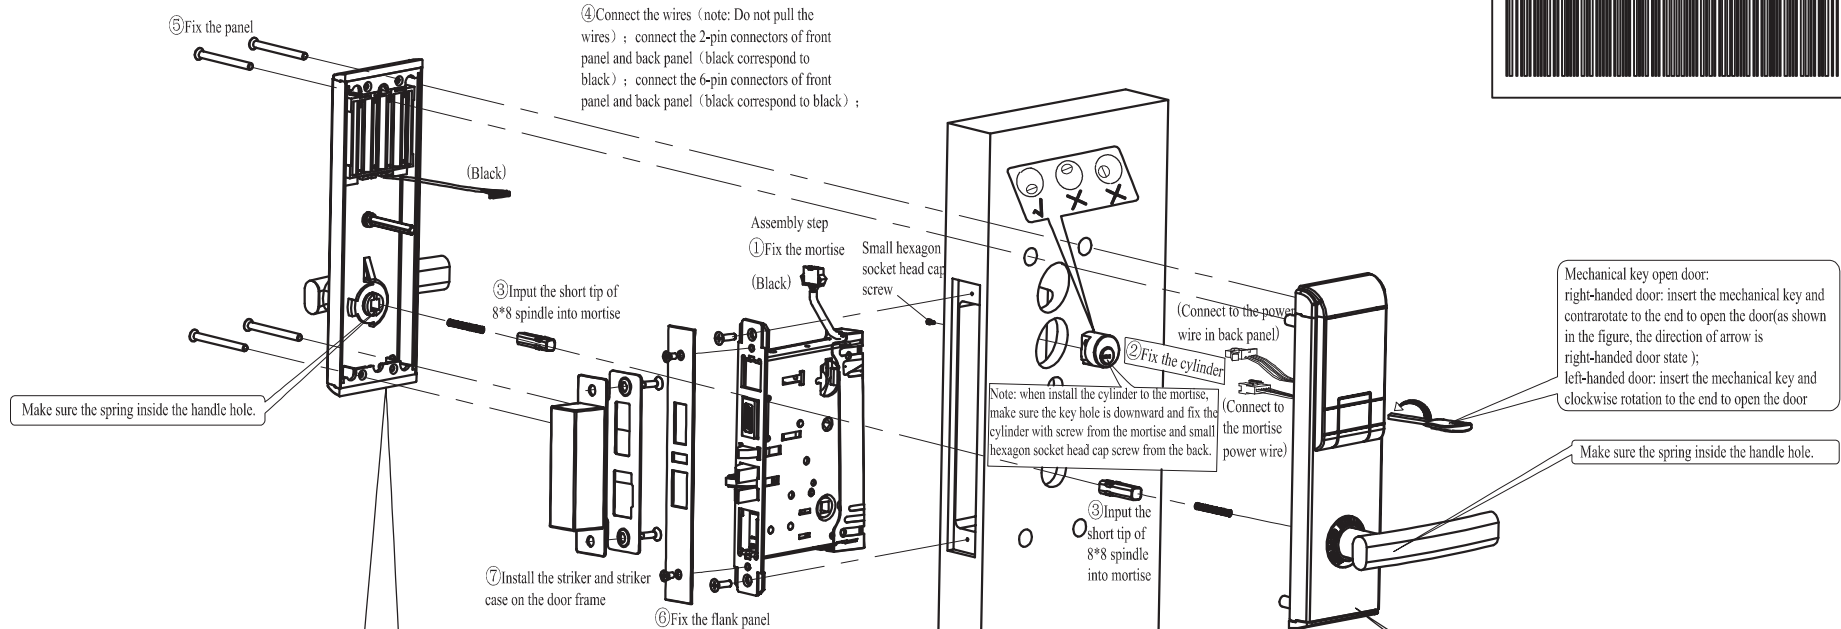


930-6-D back panel

Front

Back

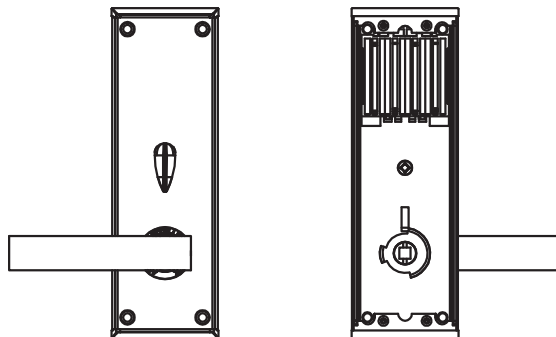

## Door trepanning method

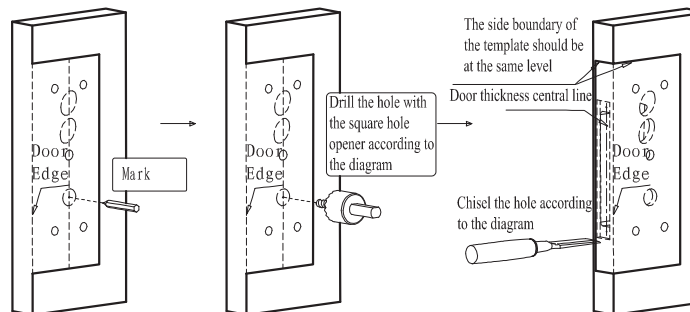

930-6-D front panel

