


918-88-F (6000-SS Mortise) Assembly Drawing


918-88 6000-SS (160215)

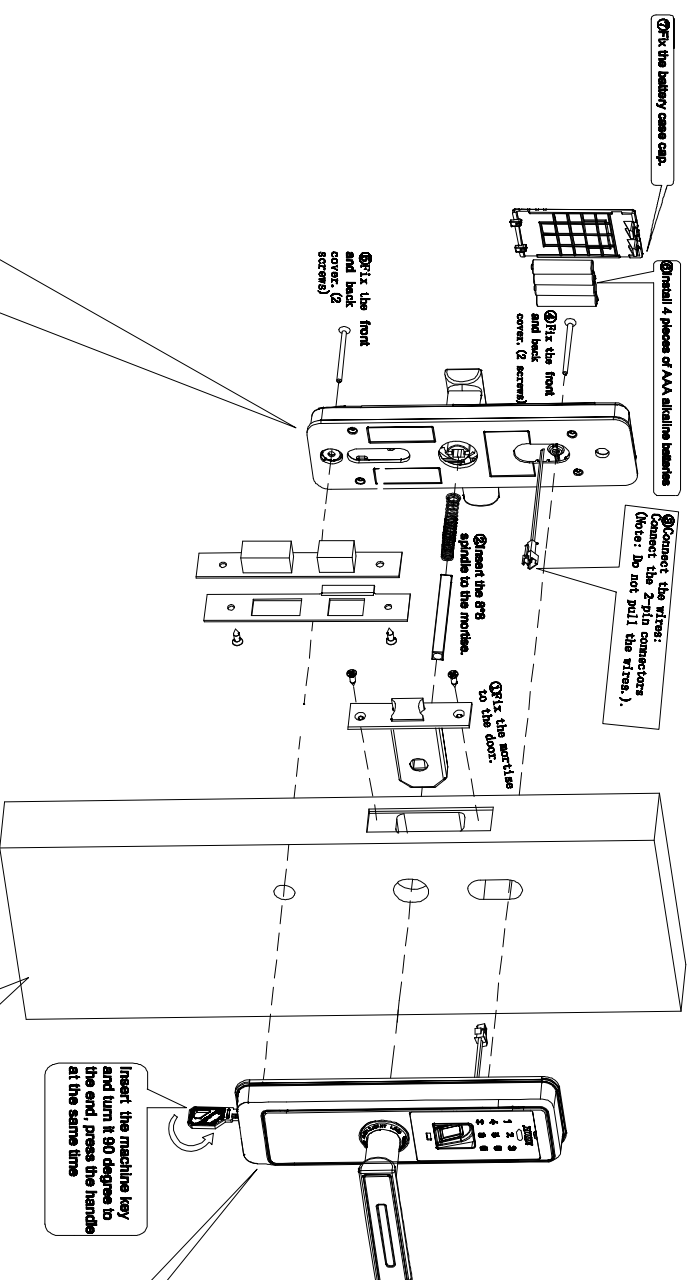


Note:
Please check this guide
carefully before assembly.



Back Cover

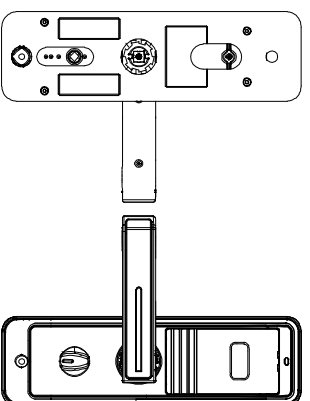

How To Punch Door Hole

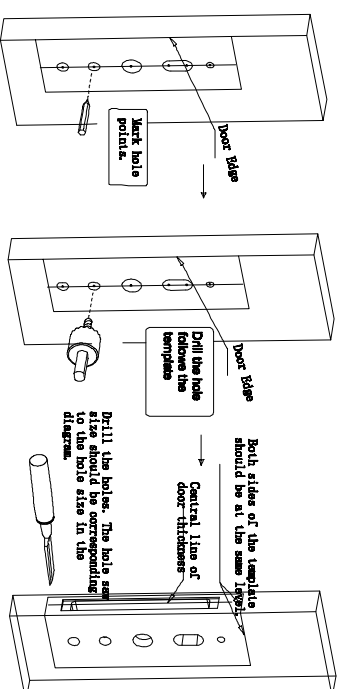

Front Cover

